知吾煮

知吾煮電子鍋mini使用說明書

zhiwuzhu Rice Cooker Mini
Operation Manual

使用產品前請仔細閱讀本說明書，並妥善保管

Please read this instruction carefully before starting the product,
and save it for future use.

本產品僅供一般家庭使用。為保證使用安全，避免對您和他人造成傷害和財產損失，請您務必遵守以下安全注意事項。不遵守安全警告而錯誤使用時可能導致事故發生。


本電器不預期供生理、感知、心智能力、經驗或知識不足之使用者(包含孩童)使用，除非在對其負有安全責任的人員之監護或指導下安全使用。

孩童應受監護，以確保孩童不嬉玩電器。


目錄

產品介紹	01
使用	02
操作指引	04
維護與保養	05
故障排除	06
故障代碼	07
注意事項	07
基本參數	09
限用物質	09

產品介紹

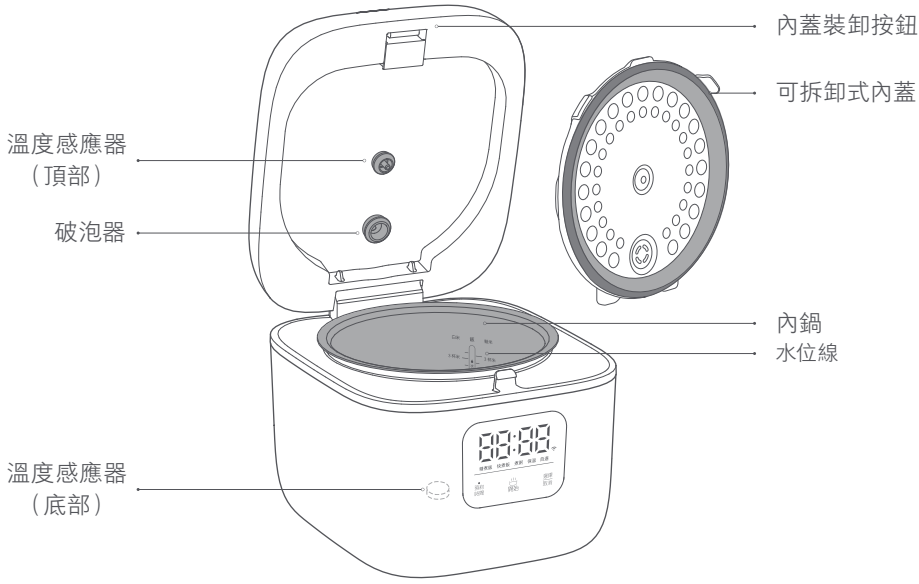

說明書中的產品、配件、使用者介面等插圖均為示意圖，僅供參考。由於產品的更新與升級，產品實物與示意圖可能略有差異，請以實物為準。

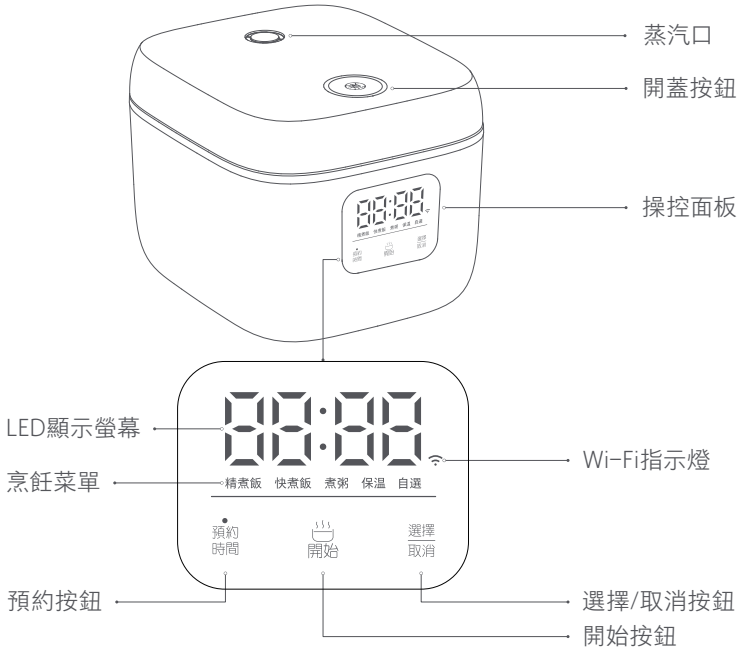


配件清單圖示



飯勺 × 1




量杯 × 1



電源線 × 1

使用

連接電源線後，即可開始使用。

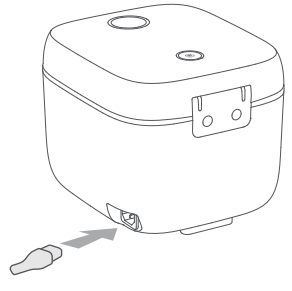

連接電源線

將電源線連接至主機底部的電源接口，然後將電源線另一端插入交流電插座。

開機和關機

1. 開機
   接通電源後，屏幕點亮即開機。

2. 關機
   烹飪完成後，拔下電源插頭即可關機。

連接米家APP

本產品已接入米家，可通過米家APP操控，並與其他產品互聯互通。

掃描二維碼，下載並安裝米家APP，已安裝米家APP的用戶將直接進入設備連接頁。或在應用商店搜索“米家”，下載並安裝米家APP。打開米家APP首頁，在頁面右上角點擊“+”，根據APP提示方式添加設備。

提示：由於米家APP的升級與更新，實際操作可能與以上描述略有差異，請按照當前米家APP內指引進行操作。



Wi-Fi連接

首次開機Wi-Fi燈閃爍，用米家APP搜索設備，即可連接。連接後Wi-Fi燈長亮，熄屏狀態時熄滅。



重置Wi-Fi

同時按下“預約時間”和“選擇/取消”鍵，可重置Wi-Fi。屏幕顯示跑馬燈動畫，重置成功後，Wi-Fi圖標閃爍，電子鍋進入等待連接狀態。



開始煮飯


1. 開蓋

   按開蓋按鈕打開上蓋。

   提示：如需取出內鍋，請輕推上蓋使其充分打開。取出內鍋時，請避免碰撞到內蓋。



2杯米約3人份



2. 放米放水

   以煮2杯東北米為例，加水至相應刻度2。加水時不能超過相應水位刻度線，否則可能引起溢鍋、短路等故障。



3. 設置菜單

   電子鍋通電後，按“選擇/取消”按鈕，選擇“精煮飯”、“快煮飯”或“煮粥”等模式。精煮飯約60分鐘，快煮飯約40分鐘。



4. 開始煮飯

   按“開始”按鈕進入烹飪狀態。

   警告：“精煮飯”和“快煮飯”擋僅適用於米飯，用於其他烹飪將可能導致燙傷及損害產品性能。

操作指引



菜單切換

按下“選擇/取消”按鈕，選擇想使用的模式。每按一次，菜單便按“精煮飯”、“快煮飯”、“煮粥”、“保溫”、“自選”順序依次切換。



1. 精煮飯

開機默認“精煮飯”模式，烹飪時長根據不同米量程序自動進行調整（預計時長約1小時）。



2. 快煮飯

烹飪時長根據不同米量程序自動進行調整（預計時長約40分鐘）。



3. 煮粥

默認時長1小時30分鐘。

提示：可通過知吾煮APP調節烹飪時長，調節範圍40分鐘—4小時。



4. 保溫

烹飪完成後，電子鍋自動進入保溫模式，保溫溫度維持在73℃左右。可手動選擇保溫模式。

提示1：建議保溫時間不超過12小時。超過24 小時，自動取消保溫進入待機模式；

提示2：可通過知吾煮APP設置烹飪完成是否保溫；

提示3：在知吾煮APP中選擇的部分不適宜保溫的模式（如：烘烤蛋糕），在烹飪完成後不會自動進入保溫模式。



5. 自選

APP中推荐有多种美食制作模式，可利用APP设定其中一种作为自选功能进行烹饪。

提示1：产品出厂时自选挡默认为炖煮功能。

提示2：APP中含有蛋糕等烹饪功能。



6. 預約

1) 選擇好烹飪模式後（選擇“精煮飯”為例），按“預約時間”按鈕設置預約完成時間。例如：預計兩小時後開飯，則需將預約時間設置為02：00。


提示：當前時間到預約完成時間比烹飪週期時間要長，才能預約成功。否則會立即開始烹飪。




2) 預約初始界面顯示所選模式烹飪所需時長。每按一下 “預約時間” 按鈕，預約時長增加15分鐘，按 “開始” 按鈕開始預約烹飪。

維護與保養

1. 內蓋拆卸

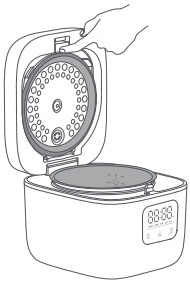

a. 向上推動內蓋鎖扣使內蓋自動彈出

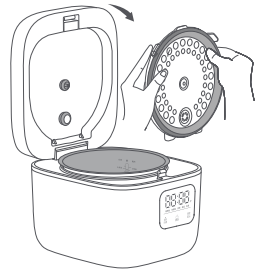


b. 雙手捏住內蓋將其取下

2. 內蓋安裝



a. 內蓋卡扣插入電子鍋內蓋卡槽後，輕輕推入

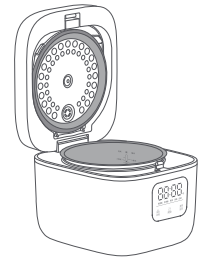

b. 上方鎖扣把內蓋扣住，安裝完畢

故障排除

故障類型	故障判斷及解決
上蓋無法合上	請檢查內蓋是否安裝
按鍵無反應	電子鍋是否在烹飪、預約或保溫模式， 按“選擇/取消”按鈕退出
煮飯漏氣	上蓋各矽膠密封件是否有老化、變形或破損漏氣
煮飯夾生 （未煮熟）	米水比是否按要求刻度匹配（水偏少）
	米的生產日期是否超過六個月
	內鍋鍋底、傳感器配合的頂面是否有異物
	鍋底傳感器鋁蓋表面是否變形
煮飯煮粥溢出	內鍋鍋底是否變形
	米水比是否按要求刻度匹配（水偏多）
	內鍋鍋底、傳感器配合的頂面是否有異物
	鍋底傳感器鋁蓋表面是否變形
煮飯呈塊狀爛飯	內鍋鍋底是否變形
	米水比是否按要求刻度匹配（水偏多）
	保溫時間是否超過12小時
煮飯過程有異味	內蓋組件是否殘留上次烹飪的食物和積水
	內蓋密封圈是否有異味
	首次使用產品前，請使用“快煮飯”模式煮清水 2至3次，每次40分鐘，可有效減少異味。
煮飯底部焦黃	米是否淘乾淨
	內鍋鍋底、傳感器配合的頂面是否有異物
	鍋底傳感器鋁蓋表面是否變形
	內鍋鍋底是否變形
保溫變硬或 異味	保溫時間是否超過12小時
	內鍋鍋底、傳感器配合的頂面是否有異物
	鍋底傳感器鋁蓋表面是否變形
	內鍋鍋底是否變形
預約功能不能 按要求進行	當前時間到預約完成時間比烹飪週期時間是否要短
	設置完預約時間後，是否未按開始按鈕
Wi-Fi連不上	用戶APP版本是否為最新
	電子鍋位置Wi-Fi強度是否足夠

無法更新韌體	是否處於煮飯過程中
	Wi-Fi是否正常

故障代碼

代碼	故障描述	備註
E-09	頂部感應器損壞	請聯絡售後服務進行維修
E-10	底部感應器損壞	請聯絡售後服務進行維修
E-11	通訊故障	請聯絡售後服務進行維修

注意事項

使用限制
- 產品正常工作海拔範圍高度為 0 m ~ 2000 m。
- 產品不應放在不平衡、潮濕或者靠近其他火源、熱源（如爐具）的地方，距離最好是 30 公分以上。
- 請勿使用非專用內鍋或變形後的內鍋，以免因過熱導致燙傷或受傷。

清潔保養時
- 器具不得浸入水中或淋水。
- 請勿使用鋼絲球等硬質物品清洗或擦洗內鍋。
- 請使用軟布進行清洗。

交流電源線
- 請僅使用原裝提供的交流電源線。
- 在進行維護作業或移動之前，請從交流電源插座上斷開交流電源線的連接。
- 若電源線損壞時，必須由製造商、其服務處或具有相關資格的人員加以更換以避免危險。
- 請勿過度擰捏、彎曲或扭轉交流電源線，否則線芯可能會暴露在外或折斷。
- 請勿在任何其他裝置上使用所提供的交流電源線。

電源注意事項
- 禁止使用交流 110V 以外的電源，以免造成火災觸電。
- 斷開交流電源線連接時，務必手抓住電源插頭部分拔下電源。請勿拉扯交流電源線，以免造成觸電或短路起火。
- 請勿讓兒童單獨操作使用，要放在嬰幼兒不能觸及的地方，以避免觸電、燙傷等危險事故發生。
- 請不要用潮濕的手插入或拔出電源插頭，以免造成觸電或受傷。
- 請單獨使用額定電流 10 A 以上的帶接地線插座，以免引起火災等危險。

關於環境
- 因蒸汽和熱量會導致牆壁及家具受損、變色、變形，因此使用時請距離牆壁和家具 30 公分以上。
- 放入廚房壁櫃等地方使用時，應注意保持通風。

使用中

- 請勿將內鍋放置到其他熱源上加熱（如電磁爐、燃氣爐）。
- 請勿在排氣孔或縫隙間插入任何物件，以免觸電或受傷。
- 使用中或剛使用結束，請勿用手直接接觸內鍋，以免高溫燙傷。
- 使用中或剛使用結束，切勿將身體靠近蒸汽口處，特別要注意不要讓嬰幼兒靠近，以免導致燙傷。
- 產品工作中，請勿移動或晃動。
- 切勿用此電子鍋做可能引起排氣孔堵塞的食物（如紫菜、海帶等片狀食物）。
- 嚴禁使用時用其他物品覆蓋電子鍋頂蓋，以免蒸汽無法釋放。
- 如果保溫時間超過 24 小時，米飯會出現異味。

使用結束

- 不使用時，切記關閉電源並拔下電源插頭。
- 必須對蒸汽排出管道做定期檢查，以確保其不被堵塞。
- 如產品發生異常或故障時，請立即停止使用，並拔掉電源插頭。需等到冷卻後才能開蓋取出內鍋。

其他注意事項

- 請不要摔落本產品或碰撞堅硬物，以免造成受傷或故障。
- 請勿在內蓋結構損壞的情況下使用，以免因蒸汽、煮沸洩漏造成燙傷或受傷。
- 請勿改造。非維修技術人員，不可拆卸修理，以免造成火災、觸電及受傷。
- 發生異常或故障時，立即停止使用，以免造成火災、觸電及受傷。
- 器具不能在外接控制器或獨立的遙控控制的系統下運行。
- 產品上的矽膠件避免與乙醇含量大於50%的酒精飲料接觸。

異常或故障

- 使用中電源線、電源插頭異常發熱。
- 電子鍋中有煙霧冒出、有燒焦的異味。
- 電子鍋某部分發生裂開、鬆動或有異響。
- 內鍋變形。
- 以及其他的異常或故障。

基本參數

產品名稱	電子鍋	**產品型號**	ZCDQ071	**額定電壓**	110V~
額定容積	1.1L	**額定功率**	400W	**額定頻率**	60Hz
最大容積	1.6L	**能效等級**	4 级	**加熱方式**	電熱盤加熱
內鍋材質	合 金	**产品尺寸**	239 × 210 × 186mm		
無線連接	Wi-Fi IEEE 802.11b/g/n 2.4GHz				

限用物質

	設備名稱：電子鍋， Equipment name			型號（型式）：ZCDQ071 Type designation (Type)		
單元 UNIT	限用物質及其化學符號 Restricted substances and its chemical symbols					
	鉛 Lead (Pb)	汞 Mercury (Hg)	鎘 Cadmium (Cd)	六價鉻 Hexavalent chromium (Cr^{+6})	多溴聯苯 Polybrominated biphenyls (PBB)	多溴二苯醚 Polybrominated diphenyl ethers (PBDE)
矽膠件（內蓋密封圈、破泡器密封圈、防滑墊、膠腳等）	○	○	○	○	○	○
塑料部件（外殼、面板、破泡器、支架、按鈕等）	○	○	○	○	○	○
金屬部件（內蓋、螺釘、彈簧等）	○	○	○	○	○	○
配件（飯勺、量杯）	○	○	○	○	○	○
電路板	○	○	○	○	○	○
電源線	○	○	○	○	○	○
頂部温度傳感器组件	○	○	○	○	○	○
底部温度傳感器組件	○	○	○	○	○	○

備考1.“超出0.1 wt %”及“超出0.01 wt %”係指限用物質之百分比含量超出百分比含量基準值。
Note 1：“Exceeding 0.1 wt %" and "exceeding 0.01 wt %" indicate that the percentage content of the restricted substance exceeds the reference percentage value of presence condition.

備考2.“○”係指該項限用物質之百分比含量未超出百分比含量基準值。
Note 2：“○ " indicates that the percentage content of the restricted substance does not exceed the percentage of reference value of presence.


備考3.“－”係指該項限用物質為排除項目。
Note 3：The "–" indicates that the restricted substance corresponds to the exemption.

Important Safeguards

Service Restrictions	· The normal working altitude of the product ranges from 0 m to 2,000 m. · The product should not be placed in an unbalanced or humid place or one close to a fire or heat source (such as a stove), but preferably at a distance of more than 30cm from them. · Do not use any non-specific or deformed inner pot to avoid burns or injuries due to overheating. · This appliances is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
Cleaning and Maintenance	· Do not immerse any part of the rice cooker in water or spray water on any part of the rice cooker . · Do not use steel wool or other hard items to clean or scrub the inner pot. · Use soft cloth to clean the product.
AC Power Cord	· Only use the supporting AC power cord. · Disconnect the AC power cord from the AC power socket before maintenance or moving. · If the power cord is damaged, replace it with specific power cord or original one purchased from the manufacturer or maintenance department. · Do not over-pinch, bend, or twist the AC power cord, or its core may be exposed or broken. · Do not use the supplied AC power cord on any other device.
Precautions on Electric Power	· It is prohibited to adopt power supplies other than 110V, to avoid electric shock or fire disaster. · Be sure to disconnect the power cord by holding the plug firmly with your hand to avoid electric shock or fire caused by short circuit. · Do not pull the AC power cord excessively to avoid electric shock or fire caused by short circuit. · Do not allow children to operate the rice cooker alone. Keep it out of reach of infants and young children to avoid the occurrence of electric shock, scald, and other accidents. · Do not insert or pull out the power plug with wet hands to avoid electric shock or injury. · Use an independent power socket with its ground wire and at a rated current above 10A to avoid fire hazard and other accidents.
Environment	· Steam and heat will cause damage, discoloration and deformation to walls and furniture, so please keep the rice cooker more than 30cm away from walls and furniture during use. · When operating the rice cooker in a kitchen cabinet or other similar places, please ensure s ufficient ventilation.
In Use	· Do not heat the inner pot on any other heat sources such as induction cooker and gas stove. · Do not insert anything into the stream outlet or gap to avoid electric shock or injury. · Do not touch the inner pot during use or immediately after use of the rice cooker, to avoid scald due to high temperature. · Do not be close to the steam outlet during use or immediately after use of the cooker. · Do not move or shake the rice cooker while it is cooking. · Do not use this rice cooker for food materials which may cause blockage of the stream outlet, such as seaweed and kelp. · Do not cover the top of the rice cooker with other items, to avoid steam against from releasing. · Cooked rice may have bad smell if the temperature holding time exceeds 24h. · Do not add ingredients to the pot beyond the water level to avoid leakage of liquid to the connector.
After Use	· Be sure to power off and disconnect the power plug when the rice cooker is not used. · Be sure to check the steam discharge pipe regularly to ensure that it is not clogged. · If the rice cooker is abnormal or there is a fault, stop using it immediately and disconnect the power plug. Open the lid and take out the inner pot until the rice cooker cools sufficiently.
Other Precautions	· Please do not drop the product or bump it against hard objects, to avoid injury or faults. · Do not use the product when the structure of its inner lid is damaged, to avoid scald or injury caused by leaked steam or boiling liquid. · Do not modify the product. Non-maintenance technicians shall not disassemble or repair the product to avoid fire, electric shock, or injury. · If the product is abnormal or there is a fault, stop using it immediately to avoid fire, electric shock or injury. · Do not operate the product through an external controller or an independent remote control system. · The silicone parts on the product should avoid contact with alcoholic beverages containing more than 50% ethanol.
Abnormality or Fault	. Abnormal heating of the power cord or power plug in use. · Smoke and a burning smell come out of the rice cooker. · Part of the rice cooker cracks, looses or there is an abnormal noise. · The inner pot is deformed. · Other faults and abnormalities.

Thank you for purchasing and using zhiwuzhu 1.6L Rice Cooker.
zhiwuzhu 1.6L Rice Cooker is for home use ONLY.
The illustrations of product, components and user interface herein are all schematic diagrams for reference only. Due to possible upgrades of the product, there may be differences between the actual product and the schematic diagram included herein.

Product Description

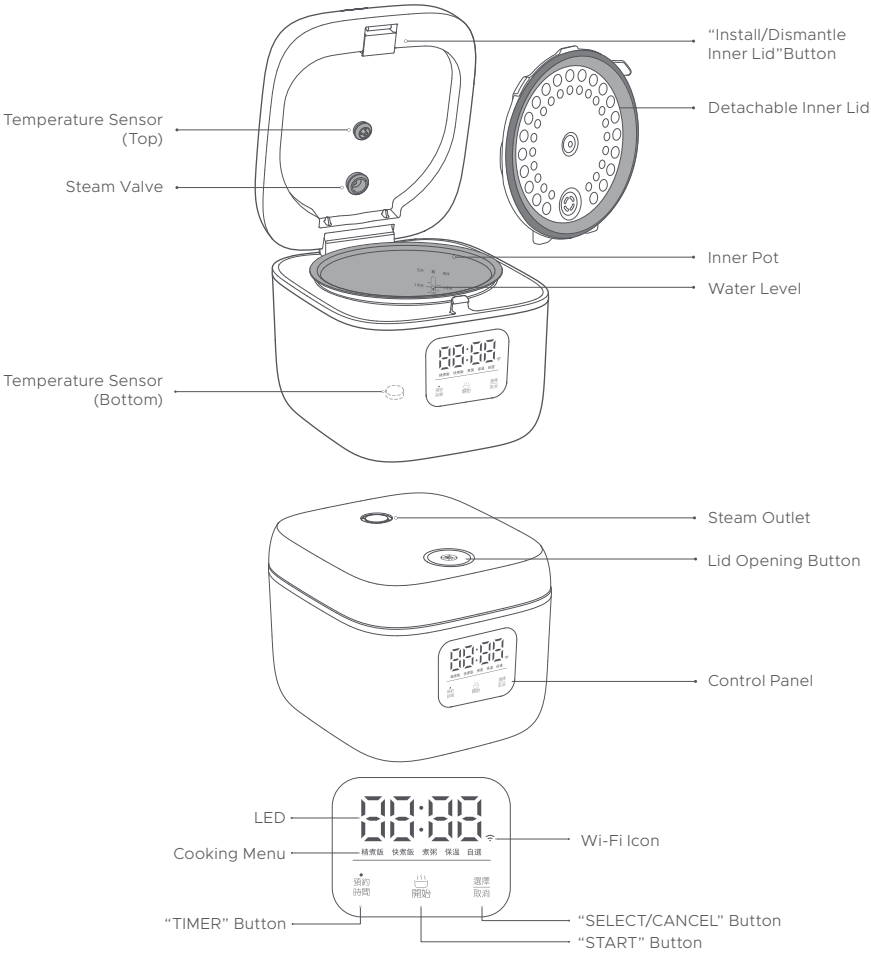

The illustrations of product, component and user interface are all schematic diagrams for reference only in the manual. Because of possible upgrade of the product, there may be some differences between the actual product and the schematic diagram included herein. The actual product shall prevail.


Accessories



Rice Scoop ×1



Measuring Cup ×1




Power Cord ×1

Start to Use

Start zhiwuzhu 1.6L Rice Cooker after the power cord is connected.

Connect Power Cord

Connect one end of the power cord to the power socket at the bottom of the main body, and then the power plug to the AC power socket.

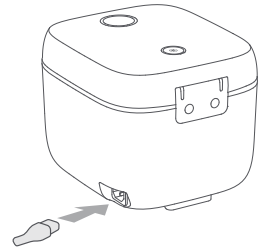

Connect with Mijia App

This product works with Mijia app. Control your device, and interact it and other smart home devices with Mijia app.

Scan the QR code to download and install the app. You will be directed to the connection setup page if the app is installed already. Or search "Mijia" in the app Store to download and install it.

Open Mijia app, tap "+" on the upper right, and then follow prompts to add your device.

Note: The version of Mijia app might have been updated, please follow the instructions based on the current app version.

Connect to Wi-Fi

The Wi-Fi icon blinks when zhiwuzhu 1.6L Rice Cooker is powered on for the first time. Search a device with Mijia APP and then you may link it to the APP. After connection, the Wi-Fi icon is on constantly and goes off when the screen turns off.



Reset Wi-Fi

Simultaneously press down the “TIMER” button and “SELECT/CANCEL” button and then reset Wi-Fi. The screen displays a marquee tool for resetting Wi-Fi settings. After a successful reset, the Wi-Fi icon blinks on the screen and zhiwuzhu 1.6L Rice Cooker becomes ready for connection.



Start to Cook Rice

1. Open the lid


Press down the Lid opening button.

Note: To take out the inner pot, gently push the lid to open it fully. Avoid touching the inner lid when taking out the inner pot.



2. Put in rice and water

Put in 2 cups of White Rice and add water to the water level “2” on the left or 2 cups of Jasmine Rice and add water to the water level “2” on the right , for example, when adding water, do not exceed the corresponding water level; otherwise, overflow, short circuit or other.

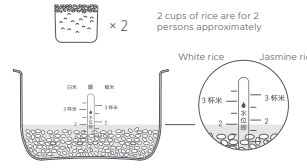

3. Set the menu

After powering on zhiwuzhu 1.6L Rice Cooker, press down the button "SELECT/CANCEL" and select a mode from "REGULAR", "QUICK", "CONGEE" and etc. zhiwuzhu 1.6L Rice Cooker will cook automatically for 60min when REGULAR is selected or 40min when QUICK.



4. Start to cook rice

Press down the “START” button to enter the state of cooking rice.

Warning: "REGULAR" and "QUICK" are applicable to rice ONLY. It may cause burns and damage product performance to use them for cooking other raw materials.



Operating Guide

Switch the menu

Press down the “SELECT/CANCEL” button and select a mode you intend to use. Every time you press down the button, the menu is switched in the order of "REGULAR", "QUICK", "CONGEE", "WARM" and "APP".



1. REGULAR

After zhiwuzhu 1.6L Rice Cooker is powered on, its default mode is "REGULAR", and the cooking time for this mode is automatically adjusted according to the programs for different cups of rice (it is expected to be about 1h).



2. QUICK

Its cooking time is automatically adjusted according to the programs for different cups of rice (it is expected to be about 40min).



3. CONGEE

The default cooking time is 1.5h for this mode.

Note: The cooking time, ranging from 40min to 4h, may be adjusted through Mijia APP.



4. WARM

After the cooking is completed, zhiwuzhu 1.6L Rice Cooker enters the mode “WARM” automatically, to maintain the temperature at about 73℃. Or the mode “WARM” may be selected manually.

Note 1: Please limit the holding time within 12h. In case of more than 24h, the mode “WARM” is automatically canceled and enters the standby status;

Note 2: You may set whether to hold the temperature through Mijia APP after the cooking is completed;

Note 3: zhiwuzhu 1.6L Rice Cooker does not automatically enter the mode “WARM” for some modes selected in Mijia APP that are not suitable for holding the temperature (such as Baking Cake).



5. APP

Mijia APP recommends various cooking modes, and you may select one of them as a custom function for cooking through Mijia APP.

Note 1: The default function of APP is stewing.

Note 2: Mijia APP provides options for cooking functions such as Baking Cake.



6. TIMER

1) After selecting the cooking mode "REGULAR", for example, press down the button "TIMER" to set the reservation time for completing the cooking. For instance, if the meal is expected to be served in 2 hours, you need to set the reservation time to 02:00.

Note: A reservation is set successfully only when the time from now to the reserved time of completion is longer than the cooking cycle of the selected mode. Otherwise, zhiwuzhu 1.6L Rice Cooker will start cooking immediately.




2) The initial reservation interface displays the cooking time required by the selected mode. Every time you press down the button "TIMER", the reservation time extends by 15min. Press down the button "START" to start the reserved cooking.



Maintenance

1. Dismantle the inner lid

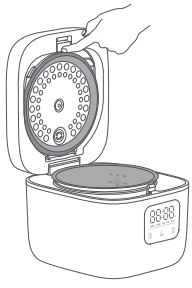

A. Push upwards the inner lid latch until the inner lid pops out automatically.




B. Hold the inner lid with hands and remove it.

2. Install the inner lid



A. Insert the inner lid latch into the inner lid slot and push it inwards gently.

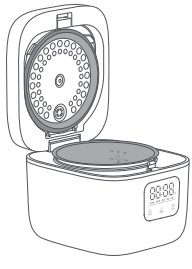

B. Fasten the inner lid with the upper latch. Then installation is completed.

Troubleshooting

Fault	Cause & Solution
The upper lid can't be closed.	Check whether the inner lid is installed.
Button doesn't work.	Check whether the cooker is in the mode cooking, "TIMER" or "WARM", and press down the button "SELECT/CANCEL" to exit if yes.
Steam leaks.	Check whether any rubber sealing part ages or is deformed or damaged.
Rice is half cooked (not fully cooked).	Check whether the rice-to-water ratio matches with the water line indicated. (Water is insufficient.)
	Check whether the production date of rice exceeds 6 months.
	Check whether there is foreign body on the contacting surface between the bottom of the inner pot and the top of the sensor.
	Check whether the surface of the aluminum cover for the pot bottom sensor is deformed.
Overflows during cooking.	Check whether the bottom of the inner pot is deformed.
	Check whether the rice-to-water ratio matches with the water level indicated. (Water is excessive.)
	Check whether there is foreign body on the contacting surface between the bottom of the inner pot and the top of the sensor.
	Check whether the surface of the aluminum cover for the pot bottom sensor is deformed.
Cooked rice is in lump.	Check whether the bottom of the inner pot is deformed.
	Check whether the rice-to-water ratio matches with the water level indicated. (Water is excessive.)
	Check whether the temperature holding time exceeds 12h.
There is bad smell during cooking.	Check whether there is food or water left on the inner lid from last cooking.
	Check whether there is bad smell from the sealing ring of the inner lid.
	Before starting the product for the first time, boil water 2 to 3 times with the mode "REGULAR", 40min each time, to reduce bad smell effectively.
The bottom of cooked rice is brown.	Ensure that rice is cleaned properly before cooking.
	Check whether there is foreign body on the contacting surface between the bottom of the inner pot and the top of the sensor.
	Check whether the surface of the aluminum cover for the pot bottom sensor is deformed.
	Check whether the bottom of the inner pot is deformed.
Cooked rice becomes hard or there is bad smell during "WARM".	Check whether the temperature holding time exceeds 12h.
	Check whether there is foreign body on the contacting surface between the bottom of the inner pot and the top of the sensor.
	Check whether the surface of the aluminum cover for the pot bottom sensor is deformed.
	Check whether the bottom of the inner pot is deformed.
"TIMER" doesn't work as required.	Check whether the time from now to the reserved time of completion is shorter than the cooking cycle of the mode selected;
	Check whether the button "START" is not pressed down after the reservation time is set.
Wi-Fi linkage fails.	Check whether the version of APP is the latest version.
	Check whether the Wi-Fi intensity is strong enough.
Firmware can't be upgraded.	Check whether the rice cooker is in the cooking process.
	Check whether Wi-Fi connection is normal.

Fault Code

Code	Description	Remark
E-09	The top sensor is damaged	Please contact the specific after-sales service for repair
E-10	The bottom sensor is damaged	Please contact the specific after-sales service for repair
E-11	Communication fault	Please contact the specific after-sales service for repair

Basic Parameter

Product Name	Rice Cooker	Product Model	ZCDQ071
Heating Way	Electric Heating Plate	Material of Inner Pot	Aluminium Alloy
Rated Voltage	110 V~	Rated Power	400 W
Rated Frequency	60 Hz	Capacity	1.1 L
Dimensions	239 × 210 × 186 mm (L×W×H)	Maximum Volume	1.6 L

After-sale Service

Please visit the official website at http://tokitglobal.com,if you need after-sales service or other information, or encounter any problem.

Version: V0.6

CCAH18LP0200T5

NCC警語：（僅適用於台灣市場）

取得審驗證明之低功率射頻器材，非經核准，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。低功率射頻器材之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。前述合法通信，指依電信管理法規定作業之無線電通信。低功率射頻器材須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。

製造商：純米科技（上海）股份有限公司
製造商地址：上海臨港長興科技園江南大道1333弄11號樓
進口商：藍點數位科技有限公司
進口商地址：臺中市北屯區廊子里祥順路一段436號1樓
服務電話：04-24222002

Manufacturer: Chunmi Technology (Shanghai) Co., Ltd.
Address: Building 11, 1333 Jiangnan Avenue, Changxing Science and Technology Park, Lingang, Shanghai

R56111
RoHS